

Making Connections

This chapter will guide you through installing peripheral devices to maximize the use of your notebook.

Installing the Memory Card

Your notebook supports different types of memory cards to provide faster data transfer.

Supported types: SD card, SDXC card, and Mini-SD card (with adapter).

1. Open the I/O port cover.
2. With the label side up, push the memory card into the memory card slot until it clicks into place.



3. Push the memory card into the memory card slot until it clicks into place.
4. Close the I/O device cover.

Removing the Memory Card

It is important to remove the memory card properly. Improper removal may cause the data in the memory card to be corrupted and your notebook to malfunction.

To properly remove the memory card, follow the steps below:

1. Click the removable disk icon on the system tray.
2. Click Eject EMV Smartcard Reader.
The system confirms that the device can be safely removed.
3. Open the I/O port cover.
4. Push the memory card to eject it.
5. Pull the card out from the slot.
6. Close the I/O device cover.

